

HYMOD INSTALLATION & REMOVAL PROCEDURE


The design of the Hymod creates a tight fitting system once fully integrated. Due to this design, removing and replacing individual modules after installation requires three simple steps:

Removing a Module:

Step 1. Loosen the two screws on either side of each adjacent module that touches that particular module by a ½ turn. This will lessen pressure on the module you intend to remove.

Step 2. Remove the screws on the module you want to remove.

Step 3. Remove the module.

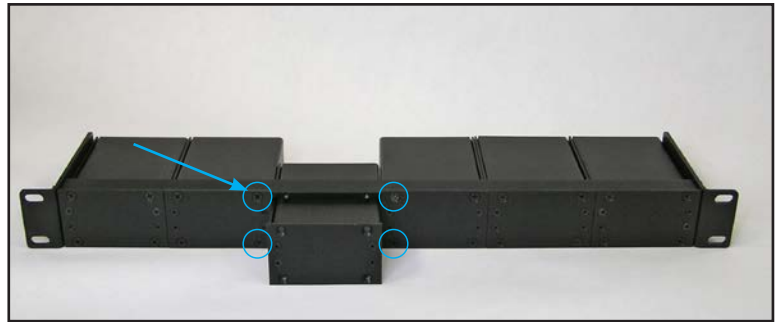

Installing a Module:

Step 1. Place all modules in the rack frame.

Step 2. First thread all screws a few turns, then tighten once modules are aligned.

